

User's Manual

UT3200+ Series Multi-channel Temperature Tester

Foreword

Dear Users,

Hello! Thank you for choosing this brand new UNI-T instrument. In order to use this instrument safely and correctly, please read this manual thoroughly, especially the Safety Requirements part.

After reading this manual, it is recommended to keep the manual at an easily accessible place, preferably close to the device, for future reference.

Warranty Service

Copyright is owned by Uni-Trend Technology (China) Co., Ltd.

If the original purchaser sells or transfers the product to a third party within three year from the date of purchase of the product, the warranty period of three year shall be from the date of the original purchase from UNI-T or an authorized UNI-T distributor. Power cords, accessories and fuses, etc. are not included in this warranty.

If the product is proved to be defective within the warranty period, UNI-T reserves the rights to either repair the defective product without charging of parts and labor, or exchange the defected product to a working equivalent product (determined by UNI-T). Replacement parts, modules and products may be brand new, or perform at the same specifications as brand new products. All original parts, modules, or products which were defective become the property of UNI-T.

The "customer" refers to the individual or entity that is declared in the guarantee. In order to obtain the warranty service, "customer" must inform the defects within the applicable warranty period to UNI-T, and perform appropriate arrangements for the warranty service.

The customer shall be responsible for packing and shipping the defective products to the individual or entity that is declared in the guarantee. In order obtain the warranty service, customer must inform the defects within the applicable warranty period to UNI-T, and perform appropriate arrangements for the warranty

service. The customer shall be responsible for packing and shipping the defective products to the designated maintenance center of UNI-T, pay the shipping cost, and provide a copy of the purchase receipt of the original purchaser. If the products is shipped domestically to the purchase receipt of the original purchaser. If the product is shipped to the location of the UNI-T service center, UNI-T shall pay the return shipping fee. If the product is sent to any other location, the customer shall be responsible for all shipping, duties, taxes, and any other expenses.

Guarantee Limit

This warranty shall not apply to any defects or damages caused by accidental, machine parts' wear and tear, improper use, and improper or lack of maintenance. UNI-T under the provisions of this warranty has no obligation to provide the following services:

- a) Any repair damage caused by the installation, repair, or maintenance of the product by non UNI-T service representatives.
- b) Any repair damage caused by improper use or connection to an incompatible device.
- c) Any damage or malfunction caused by the use of a power source which does not conform to the requirements of this manual.
- d) Any maintenance on altered or integrated products (if such alteration or integration leads to an increase in time or difficulty of product maintenance).

This warranty is written by UNI-T for this product, and it is used to substitute any other express or implied warranties. UNI-T and its distributors do not offer any implied warranties for merchant ability or applicability purposes.

For violation of this guarantee, regardless of whether UNI-T and its distributors are informed that any indirect, special, incidental, or consequential damage may occur, UNI-T and its distributors shall not be responsible for any of the damages.

Trademark

UNI-T is the registered trademark of Uni-Trend Technology (China) Co., Ltd.

Statement

- UNI-T products are protected by patent rights in China and foreign countries, including issued and pending patents.
- UNI-T reserves the rights to any product specification and pricing changes.
- UNI-T reserves all rights. Licensed software products are properties of Uni-Trend and its subsidiaries or suppliers, which are protected by national copyright laws and international treaty provisions. Information in this manual supersedes all previously published versions.







 




1. Introduction






This manual includes safety requirements, installment and the operation of UT3200+ series multi-channel temperature tester.

2. Safety Requirements

This section contains information and warnings that must be followed to keep the instrument operating under safety conditions. In addition, user should also follow the common safety procedures.

| Safety Precautions | |
|--------------------|--|
| Warning | Please follow the following guidelines to avoid possible electric shock and risk to personal safety. |
| | <p>Users must follow the following conventional safety precautions in operation, service and maintenance of this device. UNI-T will not be liable for any personal safety and property loss caused by the user's failure to follow the following safety precautions. This device is designed for professional users and responsible organizations for measurement purposes.</p> <p>Do not use this device in any way not specified by the manufacturer. This device is only for indoor use unless otherwise specified in the product manual.</p> |
| Safety Statement | |
| Warning | "Warning" indicates the presence of a hazard. It reminds users to pay attention to a certain operation process, operation method or similar. Personal injury or death may occur if the rules in the "Warning" statement are not properly executed or observed. Do |

| | | |
|---|--|--|
| | not proceed to the next step until you fully understand and meet the conditions stated in the "Warning" statement. | |
| Caution | "Caution" indicates the presence of a hazard. It reminds users to pay attention to a certain operation process, operation method or similar. Product damage or loss of important data may occur if the rules in the "Caution" statement are not properly executed or observed. Do not proceed to the next step until you fully understand and meet the conditions stated in the "Caution" statement. | |
| Note | "Note" indicates important information. It reminds users to pay attention to procedures, methods and conditions, etc. The contents of the "Note" should be highlighted if necessary. | |
| Safety Sign | | |
|  | Danger | It indicates possible danger of electric shock, which may cause personal injury or death. |
|  | Warning | It indicates that you should be careful to avoid personal injury or product damage. |
|  | Caution | It indicates possible danger, which may cause damage to this device or other equipment if you fail to follow a certain procedure or condition. If the "Caution" sign is present, all conditions must be met before you proceed to operation. |
|  | Note | It indicates potential problems, which may cause failure of this device if you fail to follow a certain procedure or condition. If the "Note" sign is present, all conditions must be met before this device will function properly. |
|  | AC | Alternating current of device. Please check the region's voltage range. |
|  | DC | Direct current device. Please check the region's voltage range. |
|  | Grounding | Frame and chassis grounding terminal |
|  | Grounding | Protective grounding terminal |
|  | OFF | Main power off |
|  | ON | Main power on |
|  | Power Supply | Standby power supply: when the power switch is turned off, this device is not completely disconnected from the AC power supply. |
| CAT I | Secondary electrical circuit connected to wall sockets through transformers or similar equipment, such as electronic instruments and electronic equipment; electronic equipment with protective measures, and any high-voltage and low-voltage circuits, such as the copier in the office. | |

| | | |
|---|---------------|---|
| CAT II | | Primary electrical circuit of the electrical equipment connected to the indoor socket via the power cord, such as mobile tools, home appliances, etc. Household appliances, portable tools (e.g. electric drill), household sockets, sockets more than 10 meters away from CAT III circuit or sockets more than 20 meters away from CAT IV circuit. |
| CAT III | | Primary circuit of large equipment directly connected to the distribution board and circuit between the distribution board and the socket (three-phase distributor circuit includes a single commercial lighting circuit). Fixed equipment, such as multi-phase motor and multi-phase fuse box; lighting equipment and lines inside large buildings; machine tools and power distribution boards at industrial sites (workshops). |
| CAT IV | | Three-phase public power unit and outdoor power supply line equipment. Equipment designed to "initial connection", such as power distribution system of power station, power instrument, front-end overload protection, and any outdoor transmission line. |
|  | Certification | CE indicates a registered trademark of EU |
|  | Certification | UKCA indicates a registered trademark of UK |
|  | Certification | ETL indicates a registered trademark of Intertek. |
|  | Waste | This product complies with the marking requirements of WEEE Directive (2002/96/EC). This additional label indicates that this electrical / electronic product must not be discarded in household waste. |
|  | EFUP | This environment-friendly use period (EFUP) mark indicates that dangerous or toxic substances will not leak or cause damage within this indicated time period. The environment-friendly use period of this product is 40 years, during which it can be used safely. Upon expiration of this period, it should enter the recycling system. |
| Safety Requirements | | |
| Warning | | |
| Preparation before use | | Please connect this device to AC power supply with the power cable provided. The AC input voltage of the line reaches the rated value of this device. See the product manual for specific rated value. The line voltage switch of this device matches the line voltage; The line voltage of the line fuse of this device is correct. |
| Check all terminal rated values | | Please check all rated values and marking instructions on the product to avoid fire and impact of excessive current. Please consult the product manual for detailed rated values before connection. |
| Use the power cord properly | | You can only use the special power cord for the instrument approved by the local and state standards. Please check whether the insulation |

| | |
|--|---|
| | layer of the cord is damaged or the cord is exposed, and test whether the cord is conductive. If the cord is damaged, please replace it before using the instrument. |
| Instrument Grounding | To avoid electric shock, the grounding conductor must be connected to the ground. This product is grounded through the grounding conductor of the power supply. Please be sure to ground this product before it is powered on. |
| AC power supply | Please use the AC power supply specified for this device. Please use the power cord approved by your country and confirm that the insulation layer is not damaged. |
| Electrostatic prevention | This device may be damaged by static electricity, so it should be tested in the anti-static area if possible. Before the power cable is connected to this device, the internal and external conductors should be grounded briefly to release static electricity. The protection grade of this device is 4 kV for contact discharge and 8 kV for air discharge. |
| Measurement accessories | Measurement accessories are of lower class, which are definitely not applicable to main power supply measurement, CAT II, CAT III or CAT IV circuit measurement. |
| Use the input / output port of this device properly | Please use the input / output ports provided by this device in a properly manner. Do not load any input signal at the output port of this device. Do not load any signal that does not reach the rated value at the input port of this device. The probe or other connection accessories should be effectively grounded to avoid product damage or abnormal function. Please refer to the product manual for the rated value of the input / output port of this device. |
| Power fuse | Please use power fuse of specified specification. If the fuse needs to be replaced, it must be replaced with another one that meets the specified specifications by the maintenance personnel authorized by UNI-T. |
| Disassembly and cleaning | There are no components available to operators inside. Do not remove the protective cover. Maintenance must be carried out by qualified personnel. |
| Service environment | This device should be used indoors in a clean and dry environment with ambient temperature from 0°C to 40°C. Do not use this device in explosive, dusty or humid air. |
| Do not operate in humid environment | Do not use this device in a humid environment to avoid the risk of internal short circuit or electric shock. |
| Do not operate in flammable and explosive environment | Do not use this device in a flammable and explosive environment to avoid product damage or personal injury. |
| Caution | |
| Abnormality | If this device may be faulty, please contact the authorized maintenance personnel of UNI-T for testing. Any maintenance, |

| | |
|----------------------------|---|
| | adjustment or parts replacement must be done by the relevant personnel of UNI-T. |
| Cooling | Do not block the ventilation holes at the side and back of this device; Do not allow any external objects to enter this device via ventilation holes; Please ensure adequate ventilation, and leave a gap of at least 15 cm on both sides, front and back of this device. |
| Safe transportation | Please transport this device safely to prevent it from sliding, which may damage the buttons, knobs or interfaces on the instrument panel. |
| Proper ventilation | Poor ventilation will cause the device temperature to rise, thus causing damage to this device. Please keep proper ventilation during use, and regularly check the vents and fans. |
| Keep clean and dry | Please take actions to avoid dust or moisture in the air affecting the performance of this device. Please keep the product surface clean and dry. |
| Note | |
| Calibration | The recommended calibration period is one year. Calibration should only be carried out by qualified personnel. |

3. Product Overview

UT3200+ series multi-channel temperature tester includes six models UT3208+, UT3216+, UT3224+, UT3232+, UT3240+ and UT3248+, which respectively corresponding to 8, 16, 24, 32, 40 and 48 channels. User can purchase the temperature tester according to their needs.

UT3200+ series adopts 4.3 inch LCD and support J, K, T, E, S, N, B, R thermocouple input. Multi-channel temperature data can be collected at the same time, with intuitive numerical reading, histogram and curve chart display, so that user can read the parameter with multiple modes or save the data in USB. The instrument has the alarm for over upper/lower limit and communication transmission function. Its perfect function and performance can meet the needs of production, laboratory and R&D measurements.

The instrument is equipped with RS232C interface, data acquisition, analysis and printing can be realized through the standard computer software. The instrument supports real-time storage of sampling data. User can calibrate data of each channel independently. It widely used in lighting appliances, electric tools, household appliances, electric motors, electric heating appliances, medicine, petroleum, chemical, metallurgy, electric power industries and scientific research institutions in the field of production lines, laboratories, quality control departments.

3.1 Specifications and Functions

| Item | Description |
|---------------------------|--|
| Display | Direct numerical reading |
| | Curve chart |
| | Histogram |
| Measurement | Thermocouple type: J, K, T, E, S, N, B, R |
| | Test Range: -200.0 °C ~1800.0 °C (the range will change with different thermocouple model) |
| | Resolution: 0.01 |
| | Number of channel: 8~48 (channel is configured according to different model) |
| | Test speed: Slow, Fast |
| Main Functions | Sorting: built-in sorting data can set the upper/lower limit for the temperature of each channel |
| | Beep: alarm for over the upper/lower limit |
| | Calibration: user can set calibration for the data of each channel |
| | Lock key |
| | Print screen key |
| Storage | FAT: user can creat the file with the suffical 【.csv】 and save the data of each channel into USB (not support mobile hard disk) |
| Interface | RS232C communication interface |
| | LAN communication interface |
| Remote Control | Baud rate supports up to 115200bps and compatiable with SCPI protocol and ASCII transmission |
| System Setup | Chinese, English |
| | Date, time and key sound |
| Environmental Temperature | Temperature: 15°C~35°C, humidity <80%RH |
| | Operating: temperature 10°C~40°C, humidity 10~90%RH |
| | Storage temperature 0°C~50°C, humidity 10~90%RH |
| Size | 214mm*88.2*330.3mm |
| Weight | 3.4kg (net weight) |

3.2 Accuracy of Instrument

The accuracy of cold junction compensation is $\pm 0.5^{\circ}\text{C}$.

The measurement accuracy of different thermocouple is shown as the following table.

The measurement accuracy divides into three parts: cold junction compensation, the

measurement accuracy of the instrument (it is different when using different thermocouple) and the measurement accuracy of thermocouple.

The measurement accuracy of thermocouple is subject to the standard of manufacturer.

| Sensor Model | Temperature (°C) | Accuracy (°C) |
|---------------------|------------------|---------------|
| Type T thermocouple | -150°C-0°C | ±1.0°C |
| | 0°C-400°C | ±0.8°C |
| Type K thermocouple | -100°C-0°C | ±1.2°C |
| | 0°C-1350°C | ±0.8°C |
| Type J thermocouple | -100°C-0°C | ±1.0°C |
| | 0°C-1200°C | ±0.7°C |
| Type N thermocouple | -100°C-0°C | ±1.5°C |
| | 0°C-1300°C | ±0.9°C |
| Type E thermocouple | -100°C-0°C | ±0.9°C |
| | 0°C-850°C | ±0.7°C |
| Type S thermocouple | 0°C-100°C | ±4.5°C |
| | 100°C-300°C | ±3.0°C |
| | 300°C-1750°C | ±2.2°C |
| Type R thermocouple | 0°C-100°C | ±4.5°C |
| | 100°C-300°C | ±3.0°C |
| | 300°C-1750°C | ±2.2°C |
| Type B thermocouple | 600°C-800°C | ±5.5°C |
| | 800°C-1000°C | ±3.8°C |
| | 1000°C-800°C | ±2.5°C |

3.3 Main Characteristics

- 4.3 inch true color LCD
- Wide range of adaptability, supports Type K/N/E/J/T/R/S/B thermocouple
- Measurement range: $-200^{\circ}\text{C} - 1800^{\circ}\text{C}$
- The main parameters of the temperature test are displayed in 6 digits, and the resolution is 0.01°C .
- Two scanning rate: fast (according to different model), slow
- Automatic detection of open-circuit thermocouple
- Direct numerical value reading, histogram and curve chart display mode.
- Cold junction compensation
- 8G USB and USB HOST interface, USB storage
- File management can keep the current setup of the instrument.
- The instrument is equipped with Type K thermocouple test line 2 meters, it can measure the temperature range $-20^{\circ}\text{C} - 200^{\circ}\text{C}$.
- Alarm for over upper/lower limit. Alert for reading changing of over-limit. The upper limit and lower limit of temperature data in each channel can be set.
- RS-232C, LAN, DC24V external power supply interface. Supports SCPI and MODBUS RTU protocol.
- It suitable for standard 2U cabinet.

4. Panel Overview

4.1 Front Panel

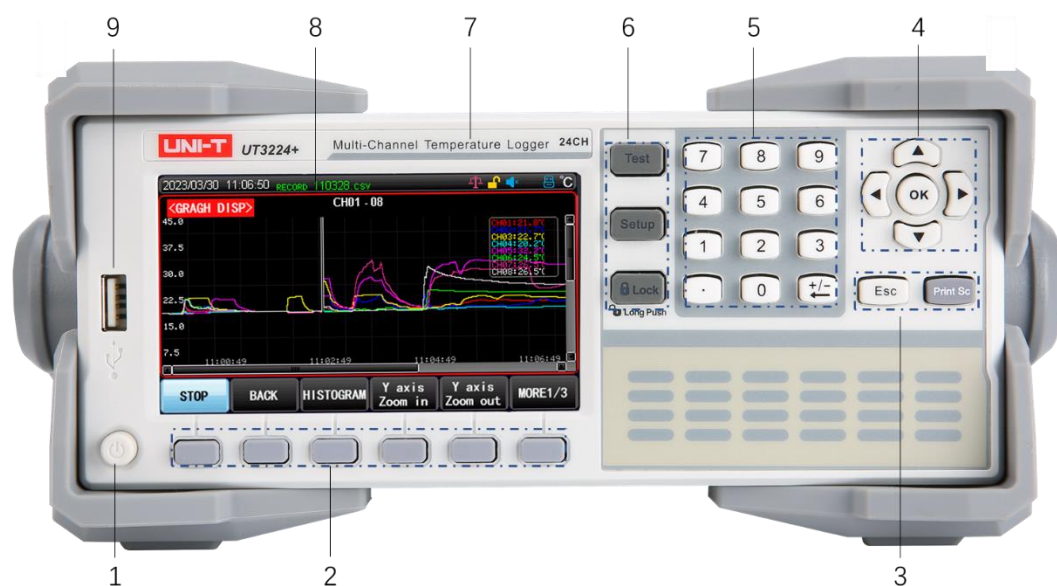


Figure 4-1 Front Panel








 










| No. | Picture | Description |
|-----|---|---|
| 1 |  | Power supply switch (slight touch); The indicator is yellow when power is ON. The indicator is red when power is OFF. |
| 2 |  | Functional key |
| 3 |  | Exit key for cancel/return |
| |  | Press this key to capture screenshot and save in USB when USB inserts in the instrument. |
| 4 |  | Arrow key is used to move the cursor |
| |  | Enter key is used to confirm the input value. |
| 5 |  | Numeric keypad is used to input numerical value; The add, subtract, delete key is used to add, subtract, and delete. |
| 6 |  | Test key is used to display the test result. |
| |  | Setup key is used to set the measurement parameter |
| |  | Lock key is used to invalidate the key. Long press 1s to unlock the key. |
| 7 |  | Emblem |
| 8 |  | USB interface |
| 9 | | 4.3 inch LCD |

Table 4-1 Interface Display and Symbol

| Symbol | Description |
|---|--|
|  | USB is insert the instrument and it can save the data or capture the screenshot to save. |
|  | Key sound is enabled. |
|  | Comparator is enabled. |
|  | Unlock the key |
|  | Lan interface |
| °C, K, °F | The unit of the current temperature |
|  | Blinking character indicates the instrument is data acquiring. |

4.2 Rear Panel

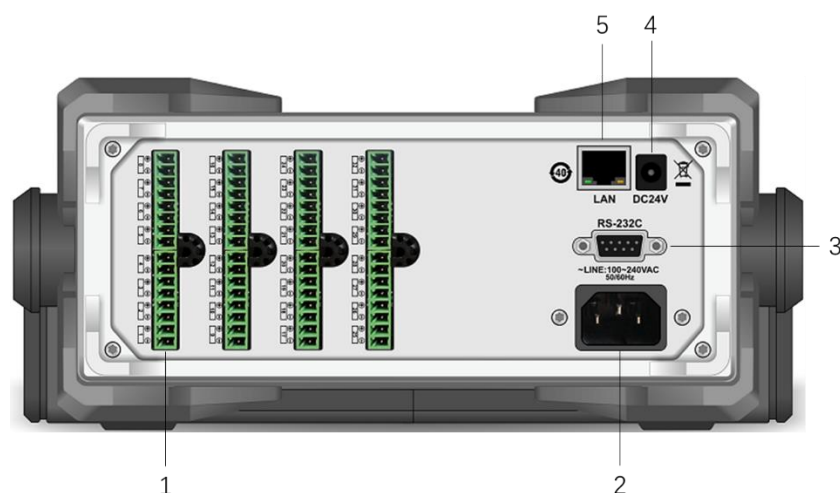


Figure 4-2 Rear Panel (Take UT3232+ as an example)

| No. | Description |
|-----|--|
| 1 | Data acquisition module UT3208+/UT3216+/24+/32+/40+/48+ is equipped with data acquisition module1/2/3/4/5/6 |
| 2 | AC power socket (not contain fuse) the fuse is inside the instrument |
| 3 | RS232C communication interface |
| 4 | DC 24V power supply interface |
| 5 | LAN communication interface |

5. Inspection and Installation

5.1 Packing List

Before using the instrument,

1. Check the appearance whether is damaged or scratched;
2. Check the packing list if has loss.

If the product is damaged or accessory is missing, please contact UNI-T sales department or distributor.

| Article | Quantity | Remarks |
|----------------------------------|----------|---|
| Multi-channel Temperature Tester | 1 pcs | The actual model is subject to the order. |
| Power Line | 1 pcs | |
| 8G USB | 1 pcs | |

| | | |
|-----------------------------------|------------------|--|
| 8-channel Temperature Test Module | Match with model | UT3208+/16+/24+/32+/40+/48+ is respectively equipped with 1/2/3/4/5/6 group. |
| RS232C Communication line | 1 pcs | |
| User's Manual | | Electronic file can download from UNI-T official website. |

5.2 Power Requirements

UT3200+ series multi-channel temperature tester can only be used under the power conditions as the following.

Voltage: 100V-240VAC

Frequency: 50/60Hz

Power: the maximum 10VA



Warning: To prevent electric shock, please make sure that the power line is securely connect to the ground.

5.3 Operation Environment

UT3200+ series multi-channel temperature tester can only be used under the environmental conditions as the following.

Temperature: 10°C~40°C

Humidity: 10~90%RH

Altitude: 0~2000 meters

5.4 Cleaning

To prevent electric shock, unplug the power line before cleaning.

Use clean cloth with slight water to wipe outer shell and panel and keep it dry. Don't let water enters the instrument.

Do not clean the external of the instrument.



Caution: Do not use solvent (alcohol or gasoline) to clean instrument.

5.5 Handle

Handle is adjustable and can adjust to four positions, hold two sides of the handle to pull or

rotate as shown in the following figure.

Figure 5-1 Original Position

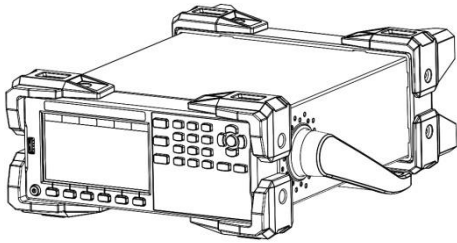


Figure 5-2 Test Position

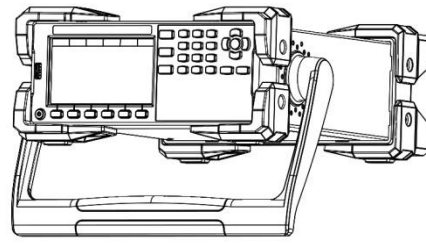


Figure 5-3 Remove Handle

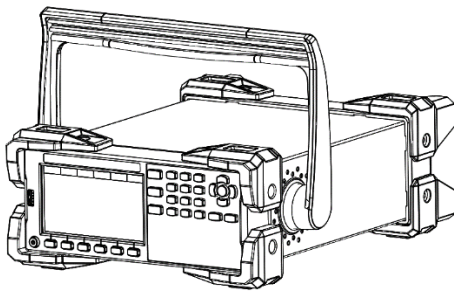


Figure 5-4 Lift Position



6. Measurement Preparation

6.1 Power On

Connecting standard power line to make sure that the instrument is power on normally.



Power supply switch in the lower left on the panel, it is a slight electronic switch. Indicator is yellow, indicating that the power of the instrument is enabled.

After confirming that the instrument is powered on, please turn off the power button. At this time, the power indicator will appear red.



Warning: Please make sure that the power voltage is matched with supply voltage. Otherwise, the instrument may burnout.


The main power plug must connect to the power socket with protective grounding. Do not use the wire board without protective grounding.

6.2 Test Line and Installation

The instrument is equipped with Type K thermocouple test line as shown in Figure 6-1 8-channel test module. Each 8-channel temperature test module includes 8 test line, so that it can measure the temperature of 8 channels at the same time. Type and specification of test module is as follows.

- Type and name: UT-T21M 8-channel test module
- Type K thermocouple
- Length: 2 meters×8
- Temperature range of Type K test line: 0~200°C
- Accuracy: ±1.5°C

Figure 6-1 8-channel Test Module

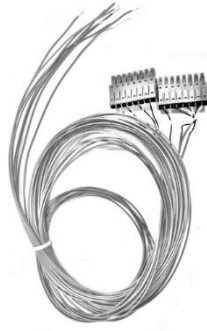

Note: Please make sure that the temperature of DUT is within the range of the test line before connecting the test probe to DUT.

Test module

UT3208+/16+/24+/32+/40+/48+ is respectively equipped with 1/2/3/4/5/6 group.

Installation Steps

Ensure that the power of the instrument is shunt down before connecting the test line to the port of data acquisition module at the rear.

1. As shown in Figure 6-2, place the test line interface face up and keep it with the data acquisition module port of the instrument on same level.
2. As shown in Figure 6-3, plug test line into eight slots of the instrument.
3. Other channel is connecting as the same way.

Figure 6-2 Data Acquisition Module Port of Instrument



Figure 6-3 Test Line Port



Caution: The isolation voltage between channels is 350V DC and 230V AC.

6.3 Channel Identifier

The product is equipped with paster to distinguish different channels with the channel number 01, 02...etc. Users can stick them on different test lines according to their needs, as shown in the figure. In order to better distinguish the matching relationship between the measurement object and the channel number of the instrument.

Figure 6-4 Channel number of each channel in the acquisition module of the temperature tester, take UT3232 as an example.

Data acquisition module in the first row on the left, it corresponds to CH01, CH02, CH03...CH08 from down to up.

Data acquisition module in the second row on the left, it corresponds to CH09, CH10, CH11...CH16 from down to up.

Data acquisition module in the third row on the left, it corresponds to CH17, CH18, CH19...CH24 from down to up.

Data acquisition module in the fourth row on the left, it corresponds to CH25, CH26, CH27...CH32 from down to up.


Data acquisition module in the fifth row on the left, it corresponds to CH33, CH34, CH35...CH40 from down to up.

Data acquisition module in the sixth row on the left, it corresponds to CH41, CH42, CH43...CH48 from down to up.

Data acquisition module in the sixth row on the left, it corresponds to CH41, CH42, CH43...CH48 from down to up.


Data acquisition module of other Instruments are sorted in the same way.

Figure 6-4 UT3232 Channel Number in Acquisition Module of Temperature Tester

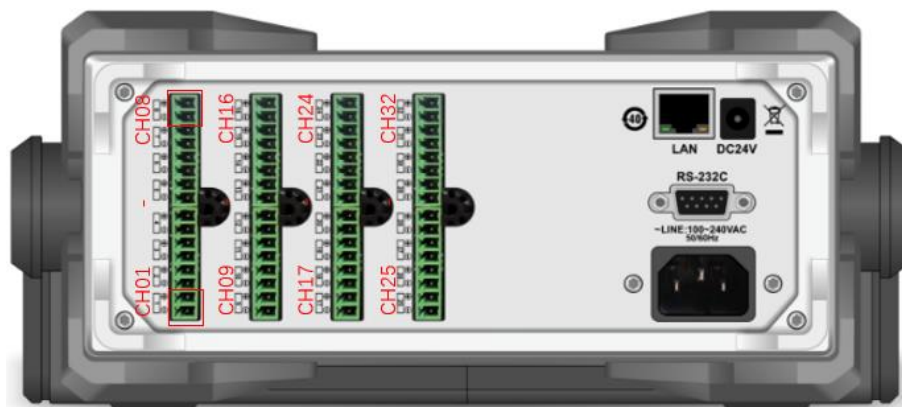

6.4 USB

Instrument is equipped with an 8G USB, USB recording function is only valid in <Test>, <Histogram> and <Curve Chart> page.

Before starting data collection, insert USB into instrument interface and wait the instrument identify USB and then press start key, data will be record in file  **RECORD** .

Curve chart and histogram can refer to section 4.5.

It is recommended to use brand USB to avoid the problem of incompatible identification. The format and capacity of the USB can be referred to FAT, FAT32 and EXFAT, with the maximum capacity of 128G.

6.5 Operation Guide

This section is to describe how to use multi-channel temperature test to measure DUT. It is necessary to make full preparation before testing according to the actual situation.

- Connect the power line correctly.
- Turn on the switch of the instrument, the screen will light up. Check the contact lines of each temperature are connected well. Starts to data acquisition, if the connection is wrong then no temperature display on this connection line; if the connection is normal, temperature will display (environment temperature).

- Insert USB into port of the instrument.
- Select the test part and fix the cloth point of temperature connection line with glue. The cloth point must be attached to the test surface to avoid effect the value precision. User can use the channel identification sticker to distinguish different test lines.
- Starting to test DUT after cloth point of each part is all fixed. Do not move DUT and the instrument during the test, so as not to effect the accuracy.
- After the test is completed, remove the test connection line and pull out USB.
- Arrange the instrument and line, then turn off the power supply.

7. <Test>

7.1 Numerical Reading

Press **【Test】** on the panel to enter <Test> page.

Note: If user need to record the data, please insert USB into the port of the instrument befor data acquisition. Start the test after USB is identified.

Display mode: numerical reading, curve chart, histogram

Numerical reading is the best way to read one or more channel values at some point. Press **【Start】** key, the instrument will start data acquisition. A green flashing cursor at the top of the screen indicates that the data is being collected, test values will show with green color as shown in Figure 7-1. Press **【Stop】** key to terminate data acquisition.

Figure 7-1 Temperature Numerical Reading



Check test data of other channel by page switching or up/down key



During data acquisition, user can set the following parameters based on your own needs.

- Different font: **【Zoom+/-】** Key is used to switch the font size. Every time you press **【Zoom+/-】**

or **【OK】** key at the bottom of the screen, the screen display will increasing or decreasing 8 or 16 channel's data. User can set front size by your own needs.

- Page switching: Switch to different channel display, the current page and total pages will displayed at the bottom of the screen. If there are multiple pages, press **【Page switching】** at the bottom of the screen or up and down key to switch to different channel display pages.

7.2 Curve Chart

Curve chart is the direct way to read temperature trends, as shown in Figure 7-2.

Figure 7-2 Curve Chart


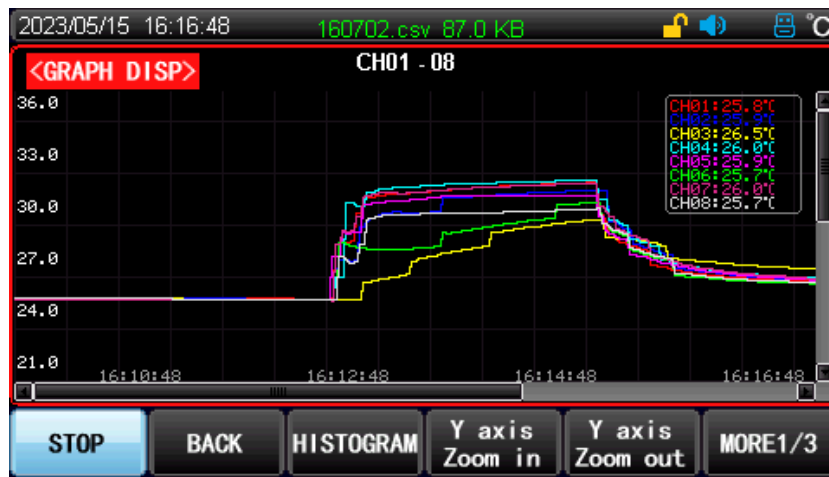


Figure 7-2 curve chart is an example of the temperature changing with time of CH01-CH0. The horizontal axis represents time and the vertical axis represents temperature. The vertical axis range is based on the set of high and low temperature. You can evaluate object temperature before test to narrow the range of vertical axis graph.

The vertical axis range can be set according to the upper/lower limit of curve in **【Y axis zoom out】** and **【Y axis zoom in】** key at the bottom of the screen or set by **【Interval】** key. Before entering the curve test, the approximate temperature range of DUT can be roughly evaluated by using **【Y axis zoom out】** and **【Y axis zoom in】** key. And then use **【Interval】** key to zoom in the temperature range in Y axis of curve.

7.2.1 Upper/Lower Limit of Curve Chart

Figure 7-3 Upper/Lower Limit of Curve Chart

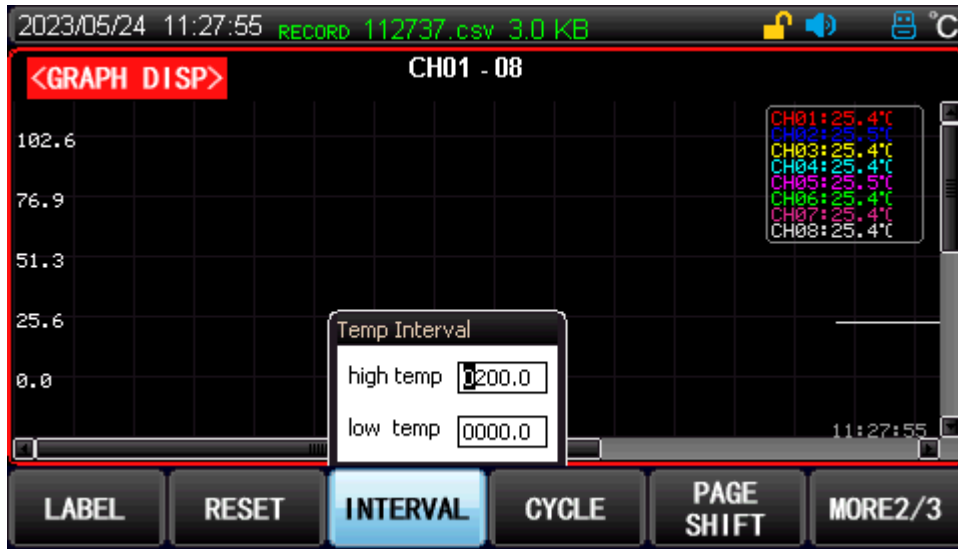

Setup Steps

- 1) Press **【More 1/3】** to enter next page.
- 2) As shown in Figure 7-3, press **【Interval】** key at the bottom of screen, input the high temp by using numeric keypad and press **【OK】** key to confirm, the cursor jumps to enter the low temp and press the **【OK】** key to confirm the setting. If the high temp is incorrectly set to less than the low temp, the input is invalid and exits. It should be re-enter. If DUT temperature range is 20~40°C, then the low temp can be set to 20°C and the high temp sets to 40°C.
- 3) Set the data display cycle, the range can be set 500ms~2mins. After pressing **【Cycle】** key at the bottom of the screen, select the desired data display speed by using up and down key, and press **【OK】** key to confirm after the setting is completed. The instrument starts data acquisition and records the temperature curve changes in real time. In slow rate, 0.5s is not available.
- 4) Storage duration of historical curve data (72 hours/board card).

7.2.2 Display Setup of Curve Chart

Functional key of curve chart

| Functional Key | Description |
|----------------|-----------------------|
| Stop | Stop data acquisition |

| | |
|-----------------|---|
| Back | Return to numerical display of channel |
| Histogram | Enter histogram interface |
| Y axis zoom in | Zoom in temperature range of curve |
| Y axis zoom out | Zoom out temperature range of curve |
| X axis zoom in | Increase the span of time axis |
| X axis zoom out | Decrease the span of time axis, the minimum scale value is 1 |
| Label | Show/Hide the switch of curve chart on the right side |
| Reset | Delete curve data and restore the curve chart to the default |
| Interval | Set temperature range |
| Cycle | Set sampling cycle of temperature (0.5s can not be set when in low speed) |
| Page Shift | The current page can only display the curve of 8 channels, press this key to switch to show the curve of other channels |
| More | Show more functional key |
| Up key | Move up temperature axis of the curve |
| Down Key | Move down temperature axis of the curve |
| Left Key | Move time axis of the curve to the left |
| Right Key | Move time axis of the curve to the right |

7.3 Histogram

Histogram is used to direct observe the temperature values of multiple channels in the same group and can compare the temperature percentage of 8 channels in the same group.

Column percentage of 8 channels =

$$\frac{\text{Actual temperature value}}{\text{The maximum of test absolute value in the same group of modules}}$$

Figure 7-4 Histogram of CH01-CH08 (All temperature >0)

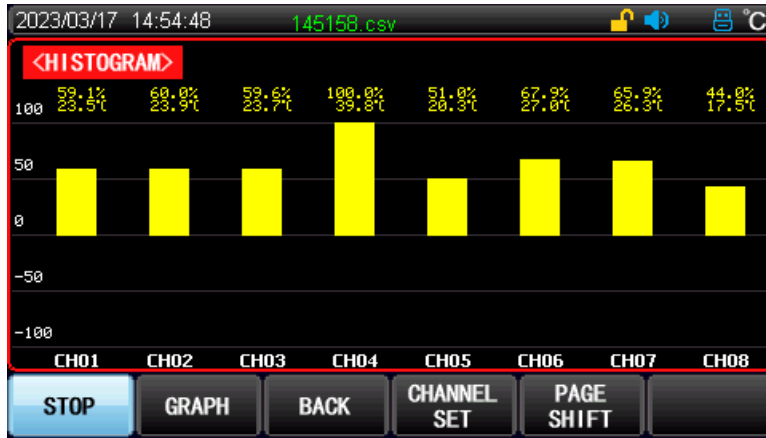


Figure 7-5 Histogram of CH01-CH08 (All temperature >0)

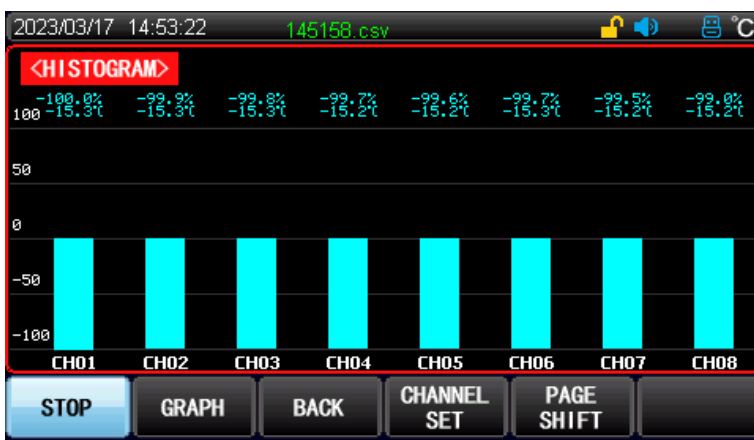


Figure 7-6 Histogram of CH01-CH08 (Temperature value has positive and negative)



System will adjust the column move to up or down according to the positive or negative temperature value of the channel. If the test module is not connected, it will not be displayed.

7.4 USB Data Record

USB recording function is only valid in <Test>, <Histogram> and <Curve Chart> page.

Data record time is subject to the internal clock of the instrument. When the internal clock stops working, the data record will also be stopped. If the internal clock does not work, that indicates the internal battery should be replaced. It is recommend to return the instrument to the factory to replace

the battery.

As shown in Figure 7-7, the file includes two parts the instrument information (file name, time, and channel number) and channel temperature (temperature unit, time, channel type and the measurement value of each channel).

For example: File path UT3224+/ RECORD/UT_20230210.csv


The data format is floating number and separate by ",".

Figure 7-7 Screenshot of Data Record

| | A | B | C | D | E | F | G | H | I | J |
|----|--------------|-----------------|-------|-------|-------|-------|-------|-------|-------|-------|
| 1 | FILE NAME | 101820.csv | | | | | | | | |
| 2 | | | | | | | | | | |
| 3 | TRIGGER TIME | 2023/2/10 10:18 | | | | | | | | |
| 4 | NUM_CHANNELS | 24 | | | | | | | | |
| 5 | UNIT | °C | | | | | | | | |
| 6 | | | | | | | | | | |
| 7 | | | TC-K | TC-K | TC-K | TC-K | TC-K | TC-K | TC-K | TC-K |
| 8 | No. | Date Time | CH1 | CH2 | CH3 | CH4 | CH5 | CH6 | CH7 | CH8 |
| 9 | 1 | 2023/2/10 10:18 | --- | --- | --- | --- | --- | --- | --- | --- |
| 10 | 2 | 2023/2/10 10:18 | --- | --- | --- | --- | --- | --- | --- | --- |
| 11 | 3 | 2023/2/10 10:18 | --- | --- | --- | --- | --- | --- | --- | --- |
| 12 | 4 | 2023/2/10 10:18 | --- | --- | --- | --- | --- | --- | --- | --- |
| 13 | 5 | 2023/2/10 10:18 | 24.28 | 23.98 | 24.04 | 23.73 | 22.86 | 22.87 | 22.78 | 22.84 |
| 14 | 6 | 2023/2/10 10:18 | 24.25 | 23.95 | 24.03 | 23.72 | 22.85 | 22.82 | 22.72 | 22.79 |
| 15 | 7 | 2023/2/10 10:18 | 24.25 | 23.95 | 24.03 | 23.72 | 22.85 | 22.82 | 22.72 | 22.79 |
| 16 | 8 | 2023/2/10 10:18 | 24.25 | 23.95 | 24.03 | 23.72 | 22.85 | 22.82 | 22.72 | 22.79 |
| 17 | 9 | 2023/2/10 10:18 | 24.24 | 23.94 | 24.02 | 23.69 | 22.84 | 22.8 | 22.7 | 22.79 |
| 18 | 10 | 2023/2/10 10:18 | 24.23 | 23.94 | 24.01 | 23.68 | 22.84 | 22.79 | 22.7 | 22.79 |

7.5 Print Sc

"Print Sc" can be used to capture screenshot when USB inserts into the instrument.


The screenshot of test value or histogram will automatically saved in file  SCREENSHOT of USB.

8. Temperature Alarm

8.1 Comparator

To compare the measured values to the upper and lower limits, it should perform two steps: turn on the comparator and set the channel. The comparator setup page is as follows.

Figure 8-1 Turn on Comparator

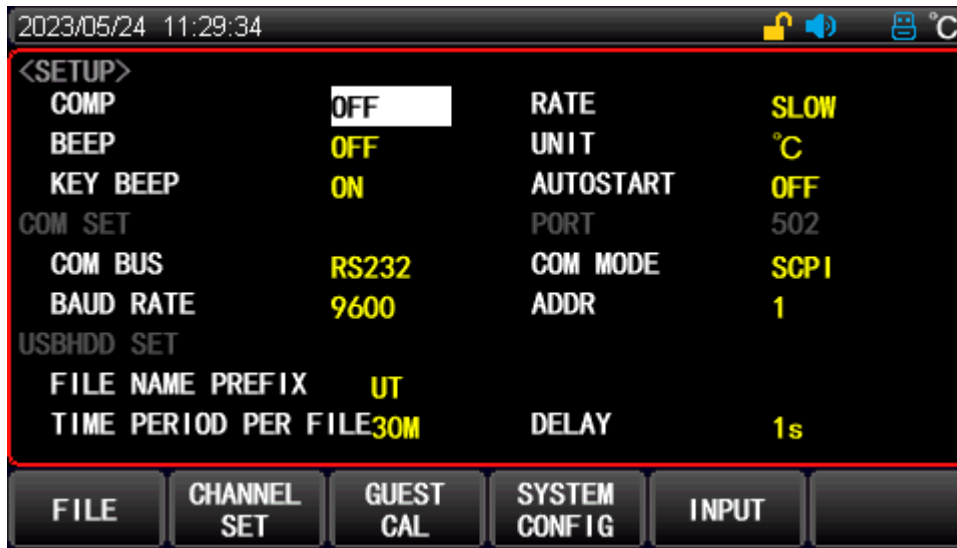

Step to turn on comparator

- Step 1 Press **[Setup]** key to enter < Setup > page.
- Step 2 Press **[Arrow]** key to move cursor to **[Comparator]** field, press **[OK]** key to turn on or off the comparator. If it selects ON, **[T]** will appear on the screen, indicating the comparator function is enabled.
- Step 3 Move cursor to **[Beep]** field, press **[OK]** key to turn on or off beep. If it selects ON, the beep will be sound when the measured value exceeds the range of the comparator.
- Step 4 User can also set the sampling rate or temperature unit by your own needs.

8.2 Channel Setup

After the comparator is enabled, enter <Channel Setup> page to set the upper/lower limit of channel temperature as shown in Figure 8-2

Figure 8-2 <Channel Setup> Page



Setup Steps

1. Enter the <Channel Set> page by using functional key **【Channe set】** at the bottom of <Function Setup> or < Measurement > page.
2. Use **【Arrow】** key to move cursor to the upper temperature and the lower temperature of the specified channel, press **【OK】** key to set, input the upper/lower limit value by numeric keypad and then press **【OK】** or **【Enter】** key to complete the setting.
3. As shown in Figure 8-2 <Channel Setup> page, move cursor to the lower temperature of CH01 and press **【OK】** key to set, input 20 by numeric keypad and then press **【OK】** to confirm; move cursor to the upper temperature of CH01 and press **【OK】** key to set, input 30 by numeric keypad and then press **【OK】** to complete the setting.
4. Use functional key at the bottom of the screen to set the function as the following table. User can set it by your own needs.

| Functional Key | Description |
|----------------|--|
| Reset | Restore the current upper/lower limit to the factory setting |
| Onekey Set | Set the upper/lower limit of other channels to be the upper limit/lower limit of the current channel |

5. Repeat the preceding steps to set other channels.
6. **【TC Model】** is used to switch temperature connecting wire for different sensor of each channel. User can select the type based on your needs by the following table.

| Functional Key | Description |
|----------------|--|
| TC-K | Type K thermocouple |
| TC-T | Type T thermocouple |
| TC-J | Type J thermocouple |
| TC-N | Type N thermocouple |
| TC-E | Type E thermocouple |
| TC-S | Type S thermocouple |
| TC-R | Type R thermocouple |
| TC-B | B thermocouple |
| Onekey set | Set sensor model of other channels to be sensor model of the current channel |

8.3 Judgement of Upper/Lower Limit


After the comparator is enabled and the upper/lower limit of channel is set, press **【Test】** key to enter <Measurement> to start data acquisition.

Figure 8-3 Alarm for Over Upper Limit

If the measured value exceeds the upper limit, the temperature data will display with red color.

If the measured value exceeds the lower limit, the temperature data will display with blue color.

Figure 8-4 Alarm for Over Lower Limit

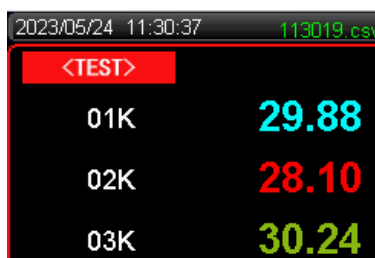

If the comparator function has been turned on, the instrument will immediately give an alarm when the measured value exceeds the upper or lower limit.

To disable the alarm, return to <Setup> page to turn off beep function.

9. [Setup]

9.1 <Function Setup>

Press **【Setup】** quick key on the panel to enter <Function Setup> page.

This page is to set measurement, including the following parameters.

- Com - Turn on/off comparator function (refer to section 8.1)
- Beep - Turn on/off beep (refer to section 8.1)
- Key beep - Turn on/off key sound
- Rate - Sampling rate
- Unit - Temperature unit
- Auto-start - Auto-start after power outage - Restore to the last measurement state
- Com setup

- Com mode
- Baud rate
- Port
- USB - File name prefix - Prefix of storage file
- USB - Time period per file - Automatic segmentation of storage file
- USB - delay - Time interval of data record

Figure9-1 <Function Setup> Page



Table 9-1-1 Function Setup

| Item | Input Range | Default | Description |
|-----------|---------------------------|---------|---|
| Com | ON, OFF | OFF | Turn on or off comparator |
| Beep | ON, OFF | OFF | Turn on or off comparator beep |
| Key Beep | ON, OFF | ON | Turn on or off key beep |
| Rate | Slow, fast | Slow | Fast: sampling period is 0.5s Slow: sampling period is 1s |
| Unit | °C, K, °F | °C | Temperature unit |
| AutoStart | ON, OFF | OFF | Auto-start after power outage, whether to restore the measurement state after reboot |
| COM BUS | RS232C, LAN | RS232C | Communication bus setting |
| COM MODE | Modbus, SCPI | SCPI | The instruments supports two communication protocols SCPI and Modbus (RTU). In general, using SCPI to communicate with computer and Modbus to communicate with PLC. |
| Baud rate | 4800, 9600, 19200, 38400, | 9600 | Baud rate of serial port bus |

| | | | |
|----------------------|--|-----|---|
| | 57600, 115200 | | |
| ADDR | 0~255 | 1 | If Modbus (RTU) is used, the station number address of the device should be set. ① The instrument allows station number 00 for broadcast communication. ② 1~255: Address of the instrument when connected to the bus. |
| File name Prefix | UT_ | UT_ | Prefix of Filename |
| Time Period per File | Off, 512K, 1M, 2M, 5M, 10M, 20M, 30M, 5min, 10min, 15min, 30min, 1hour | 2M | Storage file will be automatic segmentation, create a new file and save. |
| Delay | 1s, 2s, 5s, 10s, 15s, 20s, 30s, 1min, 2min, 5min, 10min, 20min, 30min, 1hour | OFF | Time interval of data record |

9.1.1 Set 【Rate】 of Data Acquisition

The rate can be set to slow or fast.

Setup steps

- Press 【Setup】 quick key to enter <Function Setup> main page;
- Use 【Arrow】 key to move cursor to 【Rate】 field, press 【OK】 and 【Arrow】 key to select.

| Functional Key | Description |
|----------------|-------------------------|
| Slow | Sampling period is 1s |
| Fast | Sampling period is 0.5s |

9.1.2 Set Temperature 【Unit】

Setup steps

- Press 【Setup】 quick key to enter <Function Setup> main page;
- Use 【Arrow】 key to move cursor to 【Unit】 field, press 【OK】 and 【Arrow】 key to select.

| Functional Key | Description |
|----------------|-------------|
|----------------|-------------|

| | |
|----|------------------|
| °C | degree Celsius |
| K | Kelvins |
| °F | Fahrenheit scale |

9.1.3 【Key Beep】

Setup steps

- Press **【Setup】** quick key to enter < Setup> main page;
- Use **【Arrow】** key to move cursor to **【Key Beep】** field, press **【OK】** and **【Arrow】** key to select.

| Functional Key | Description |
|----------------|-------------------|
| ON | Turn on key beep |
| OFF | Turn off key beep |

9.1.4 【AutoStart】

Setup steps

- Press **【Setup】** quick key to enter <Function Setup> main page;
- Use **【Arrow】** key to move cursor to **【Auto-start】** field, press **【OK】** key to select.

| Functional Key | Description |
|----------------|---------------------|
| ON | Turn on auto-start |
| OFF | Turn off auto-start |

9.2 <Channel Setup>

<Channel Setup> is to set channel's name and the upper/lower limit of temperature. This setting is related with the comparator and can refer to section 5.2.

9.3 <User-calibration>

<Guest Cal> is used to adjust abnormal temperature. Input the actual temperature value in calibration column to complete the setting.

Figure 9-2 <User-calibration> Page



Correct the specified channel, take CH001 as an example

Setup Steps

Press **【Setup】** key to enter < Setup> page, press **【Guest Cal】** key to enter <Guest Cal>

page, and use **【Arrow】** key to move cursor to calibration column **【0.0】** field, and then use functional key at the bottom of the screen to select the function as shown in the following table.

| Functional Key | Description |
|----------------|---|
| Input cal | Input the calibrated temperature value into the selected channel by using numeric keypad and press 【OK】 to complete the setting. |
| Input offset | Input the temperature offset value into the selected channels by using numeric keypad and press 【OK】 to complete the setting. |
| Delete cal | Delete the calibrated temperature value. |
| Onekey Set | Onekey to set all cal data as the current channel cal |
| Page shift | Switch to the channel on other page. |
| Onekey Delete | Onekey to delete all channels cal setting |

10. System

10.1 <System Configuration>

When the test is stop, press **【Setup】** quick key to select **【System Configuration】** key at the bottom of the screen to enter<System Configuration> page.

Figure10-1 <System Configuration> Page



10.1.1 【Language】

The instruments supports Chinese and English.

Setup steps

1. In <System config>page, use **【Arrow】** key to move cursor to <LANGUAGE> field;
2. Use **【OK】** and **【Arrow】** key to select the language.

10.1.2 【Date/Time】

The instrument adopts 24 hours system.

Setup steps

1. In <System config >page, use **【Arrow】** key to move cursor to <Date/Time> field;
2. Use **【OK】** and **【Arrow】** key to complete time setting.

Note: If the internal battery is lacked, the clock will stop work. It is recommend to return the instrument to the factory to replace the battery.

10.1.3 【Display Off】

Setup Steps

1. In <System config>page, use 【Arrow】 key to move cursor to <Display off> field;
2. Use 【OK】 and 【Arrow】 key to complete time setting.

10.2 <System Information>

System information contains product's model, sensor type, channel number, software version and the serial number of the instrument.

10.3 <Bottom Setup>

| Functional Key | Description |
|----------------|-----------------------|
| File | Refer to chapter 8 |
| Channel Set | Channel data set |
| Guest Cal | Cal data set |
| System Service | System information |
| Input | Input parameter |
| Factory Set | Reset to factory data |

11. File Management

11.1 <File>

Press 【Setup】 key to select 【File】 key at the bottom of the screen to enter <File> page.

To save or access the current function settings, perform the following operations.

11.1.1 Rename File

Figure 11-1 <File Management>

| No. | NAME | DATE TIME |
|-----|----------------|---------------------|
| 1 | SYSTEM DEFAULT | 2023-03-17 16:19:53 |
| 2 | 125 | 2023-03-20 14:47:17 |
| 3 | DEFAULT_2 | 2023-03-18 16:57:32 |
| 4 | DEFAULT_3 | 2023-03-20 16:11:32 |
| 5 | DEFAULT_4 | 2023-03-20 16:11:33 |
| 6 | DEFAULT_5 | 2023-05-24 11:51:46 |
| 7 | DEFAULT_6 | 2023-05-24 11:51:46 |
| 8 | | |

Functional keys at the bottom: ENABLE CONFIG, SAVE, RENAME, DELETE, POWER-OFF RECORD, MORE1/2

If user want to save the current setting when <Function Setup>, <System Configuration> and <Channel Setup> is set, press **File** key at the bottom of the screen to enter <File> page, the blue column is the current system file.

Use **Arrow** key to move cursor from **File** field to the specified line, such as move cursor to the third line as shown in Figure 11-2, and press **Save** key at the bottom of the screen to save the default filename "DEFAULT_2".

Seven functional keys at the bottom of the screen

| Functional Key | Description |
|------------------|---|
| Enable config | To automatically read the saved instrument's setting when next boot up |
| Save | Save the current setting |
| Rename | Rename the file |
| Delete | Delete saved setting |
| Power-off record | Whether automatically saved the modified configuration before the power failure |
| U disk | Import the setting from external USB |
| Save to U disk | Save the current setting into external USB |
| Duplicate | Copy the current setting |

Figure11-2 Rename File




Press left and right keys to move cursor to the character to be display, press **【OK】** key to input.

After the input is completed, move cursor to **【IN】** key at the end of the keyboard and press **【OK】**

key to confirm the modified file name; Press **【Esc】** key to cancel the modification.

11.1.2 File **【Delete】**

Figure11-3 File Delete

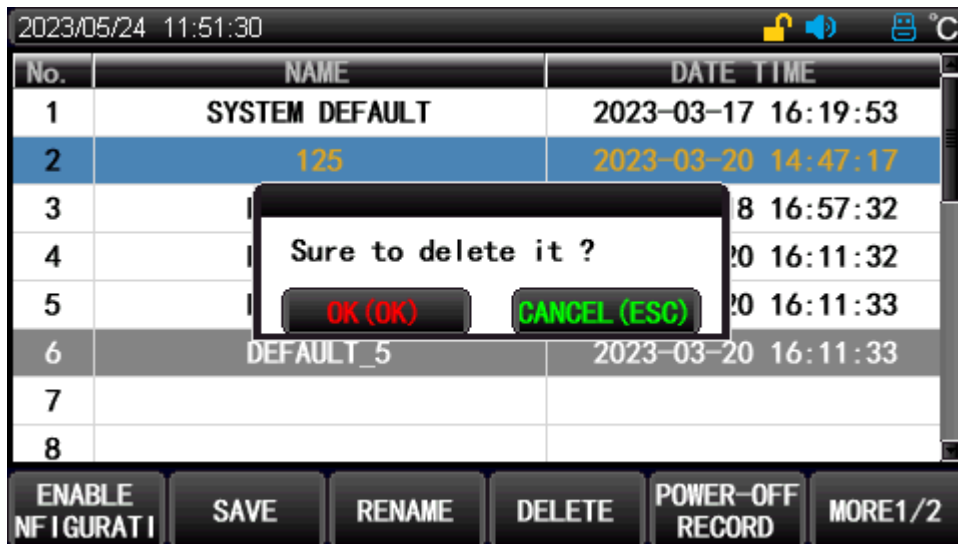


Move the cursor to the file to be delete, press **【Delete】** key at the bottom of the screen to pop

out window and press **【OK】** key to confirm to delete ; Press **【Esc】** key to cancel the setting.

11.1.3 【Save to USB】

In order to facilitate the customer to quickly set the instrument in batches, the instrument supports save the setting information to an external USB. Other instrument can read the setting parameter from USB. USB supports up to 20 external files.


Figure11-4 USB Failure

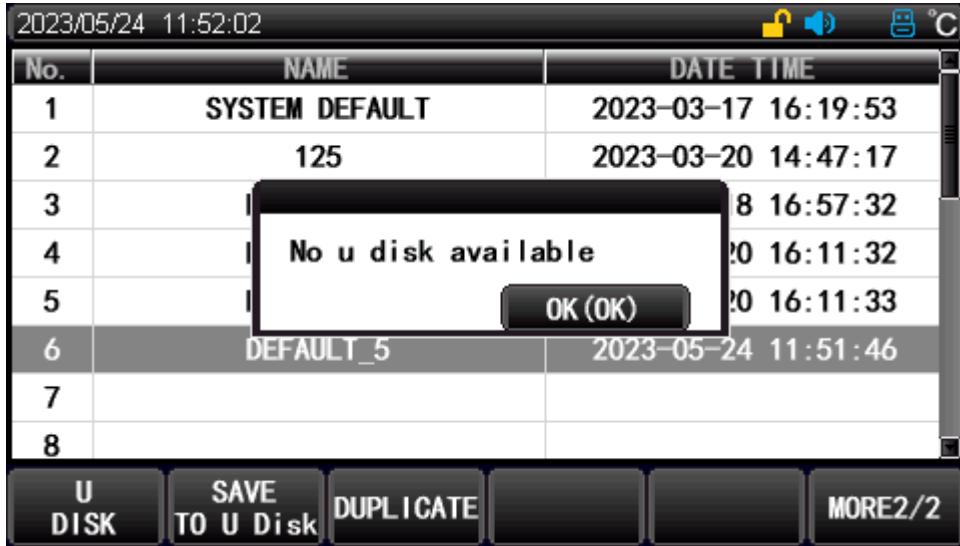

Press 【Save to USB】 key at the bottom of the screen to complete the setting. If the screen pops out window as shown in Figure11-4, indicating that USB is not detected, re-plug USB and try again. Press 【OK】 key to exit the pop out window.

11.2 Memory <File Management>

Figure 11-5 Memory <File Management>

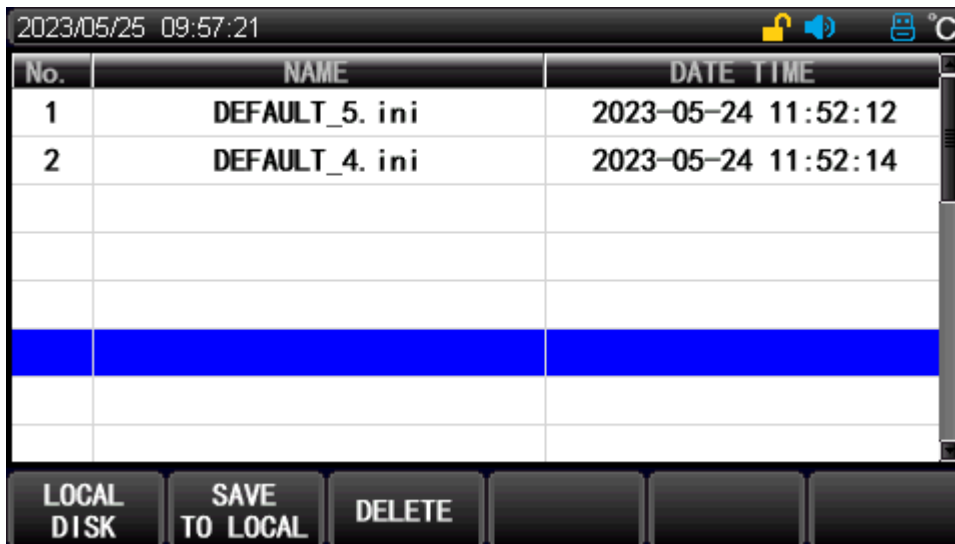

If user want to save the current setting when <Function Setup>, <System Configuration> and <Channel Setup> is set, press **【File】** key at the bottom of the screen, press **【More 1/2】** and press **【USB】** to enter file management page.

Two functional keys at the bottom of the screen.

| Functional Key | Description |
|----------------|---|
| Local disk | Switch to file management of the instrument |
| Save to local | Save the instrument's setting file of external USB into the device. |
| Delete | Delete the instrument's setting file of USB |

11.2.1 【Save to Local】

In order to facilitate the customer to quickly set the instrument in batches, the instrument supports external USB save to the instrument. Other instrument can read the setting parameter from USB. USB supports up to 20 external files.

Note: If the file name in USB is the same as the local file, it will be overlay the original file.

12. Remote Control

12.1 RS-232C

User can use RS-232 to connect a controller (PC or PLC) via UNI-T RS- 232 DB-9 serial communication line. The serial port uses the RS-232 standard for the transmit (TXD), receive (RXD), and signal ground (GND) lines. Hardware handshaking CTS and RTS lines are not used.




Caution:
Only UNI-T's (non-modem) DB-9 cable can be used.
The power cable should not over 2 meters.

Table 9-1-1 RS-232 Port and Pin

| NAME | DB-25 | DB-9 | NOTE |
|------|-------|------|---------------|
| DCD | 8 | 1 | NC |
| RXD | 3 | 2 | Receive Data |
| TXD | 2 | 3 | Transmit Data |
| DTR | 20 | 4 | NC |
| GND | 7 | 5 | Ground Line |
| DSR | 6 | 6 | NC |
| RTS | 4 | 7 | NC |
| CTS | 5 | 8 | NC |

RS-232 port on the instrument

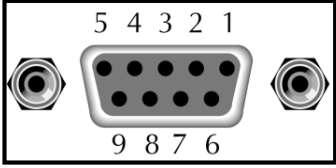

Make sure that the controller instrument is connect to UT3200+ multi-channel temperature tester and use these settings.

RS-232 data transmission:

Data bit: 8-bit

Stop bit: 1-bit

Check bit: none

Baud rate: It is recommend to use 115200.

12.2 SCPI

RS-232 interface uses SCPI language and fully supports SCPI. The details refer to "UT3200+ Series Multi-channel Temperature Tester - Programming Manual".

13. Appendix

13.1 Appendix A Maintenance and Cleaning

(1) General Maintenance

Keep the instrument away from the direct sunlight.

Caution

Keep sprays, liquids and solvents away from the instrument or probe to avoid damaging the instrument or probe.

(2) Cleaning

Check the instrument frequently according to the operating condition. Follow these steps to clean the external surface of the instrument:

- a. Please use a soft cloth to wipe the dust outside the instrument.
- b. When cleaning the LCD screen, please pay attention and protect the transparent LCD screen.
- c. When cleaning the dust screen, use a screwdriver to remove the screws of the dust cover and then remove the dust screen. After cleaning, install the dust screen in sequence.
- d. Please disconnect the power supply, then wipe the instrument with a damp but not dripping soft cloth. Do not use any abrasive chemical cleaning agent on the instrument or probes.

Warning

Please confirm that the instrument is completely dry before use, to avoid electrical shorts or even personal injury caused by moisture.

13.2 Appendix B Warranty Overview

UNI-T (UNI-TREND TECHNOLOGY (CHINA) CO., LTD.) ensures the production and sale of products, from authorized dealer's delivery date of three years, without any defects in materials and workmanship. If the product is proven to be defective within this period, UNI-T will repair or replace the product in accordance with the detailed provisions of the warranty.

To arrange for repair or acquire warranty form, please contact the nearest UNI-T sales and repair department.

In addition to permit provided by this summary or other applicable insurance guarantee, UNI-T does not provide any other explicit or implied guarantee, including but not limited to the product trading and special purpose for any implied warranties.

In any case, UNI-T does not bear any responsibility for indirect, special, or consequential loss.

13.3 Appendix C Contact Us

If the use of this product has caused any inconvenience, if you in mainland China you can contact UNI-T company directly.

Service support: 8am to 5.30pm (UTC+8), Monday to Friday or via email. Our email address is infosh@uni-trend.com.cn

For product support outside mainland China, please contact your local UNI-T distributor or sales center. Many UNI-T products have the option of extending the warranty and calibration period, please contact your local UNI-T dealer or sales center.

To obtain the address list of our service centers, please visit our website at URL: <http://www.uni-trend.com>